


SCREENEZE™ Assembly Instructions

1. Identify the Parts of the SCREENEZE™ system: The aluminum base, the vinyl cap and the color coordinated screws.
2. Determine the type of application: Corner Mount or Flush Mount. The following details are examples.

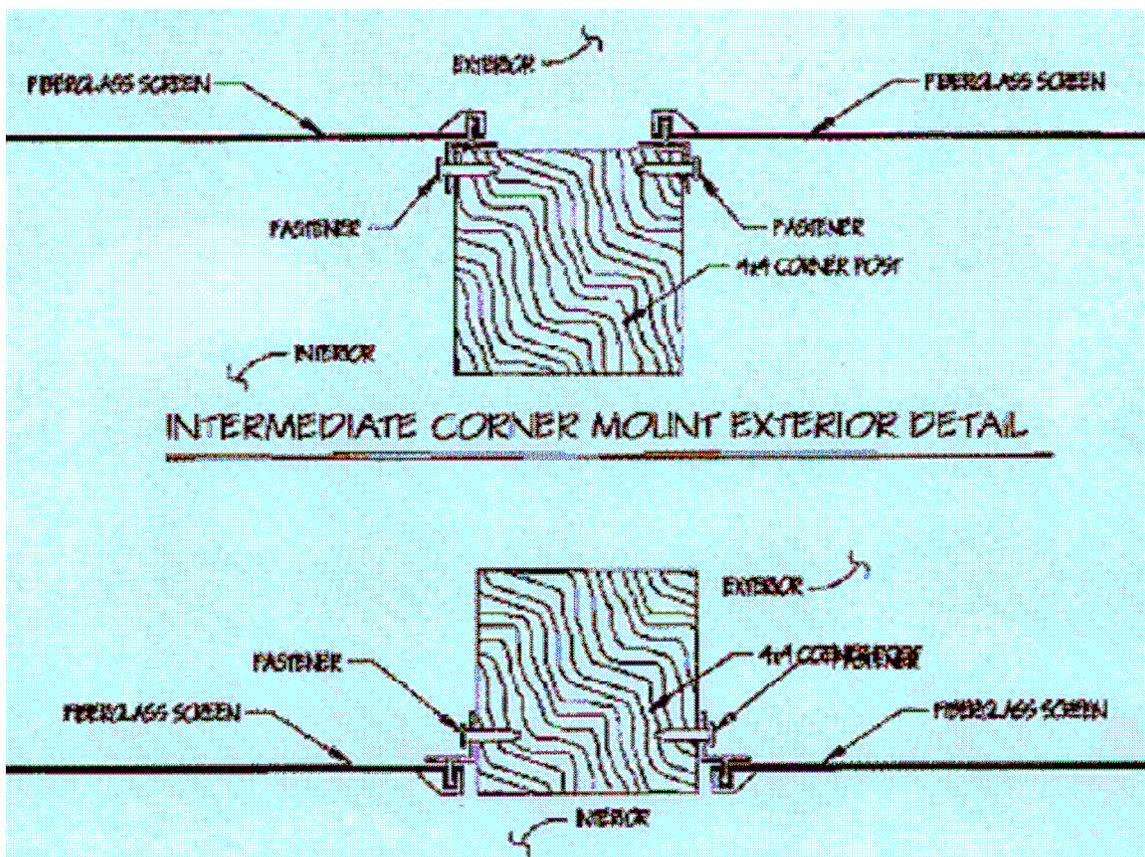

3. After determining corner or flush, snap the Vinyl Cap onto the Aluminum Base Channel. You will cut both pieces as one. TIP: The beveled edge will always face toward the screen opening.
4. Measure the opening and cut as required. Be sure Vinyl Cap does not move on the Aluminum Base Channel while making miter cuts. TIP: Never force SCREENEZE™ into an opening. For best results, make cuts snug or short by 1/32" – 1/16" to allow for expansion and contraction.
5. Find the center of each cut piece. Then mark for screw location at 10" – 12" O.C. from and including the center mark. Always place a screw at 2" from either end of cut piece. Adjust your centers to the 2" distance from the end of each cut piece. TIP: Pre-punch or drill a 3/16" hole at your

- marks. Place cut pieces in opening and check for fit. Look for true corners. Adjust if required.
6. Secure Aluminum Base Channel to the framing with screw provided.
 7. Remove Vinyl Cap from Aluminum Base Channel. A 5 in 1 tool, a miniature “Wonder Bar” or a small straight screwdriver may be used. Be careful not to scar the Aluminum Base Channel or Vinyl Cap during this process. Be careful not to mix-up sides or top and bottom as they might be different lengths. TIP: pencil identifying marks on the corresponding Vinyl Cap and its Aluminum Base Channel so they are easily kept together when completing step 8.
 8. To install screen, hold fabric to the top of the opening (square fabric on opening. Then attach screen to Aluminum Base Channel by pressing or tapping the Vinyl Cap onto into the corners. Secure the first 2”-3” of your corner by seating the Vinyl Cap to the Aluminum Base Channel with a rubber hammer. Then proceed to the center. Check screen fabric for square and tap the screen at the center point seating the Vinyl Cap completely. Complete Vinyl Cap installation by tapping from the center out towards the corners. Be sure the Vinyl Cap is tight against the Aluminum Base Channel before continuing.
 9. Install the Vinyl Cap for the bottom of the opening in the same manner used in step 8. TIP: Do not stretch the screen fabric. SCREENEZE™ will uniformly stretch the screen fabric for you. Let screen drape over bottom channel and position screen so there are no wrinkles left or right. If it’s a windy day place a thumb tack on each corner. Secure Vinyl Cap as described in step 8.
 10. Install side pieces as described in step 8. Check the entire installation ensuring that the Vinyl Cap is completely seated on the Aluminum Base Channel. Use a razor knife to cut away excess screen fabric. TIP: Use the base of the Vinyl Cap, holding your knife at a perpendicular angle, as a guide for trimming the screen.

SCREENEZE™ is distributed by:
www.sliding-screen-doors.com

SAFETY NOTICE

- SCREENEZE™ fixed screen system is produced and sold for a specific use; Field built fixed screen system”.
- Install SCREENEZE™ per the instructions provided.
- Do not use SCREENEZE™ for any other purpose than securing screen material to a screen enclosed structure.
- Do not use SCREENEZE™ for fall protection.
- As with the installation of any building product we strongly recommend the use of hand, eye and ear protection. Refer to your State of Federal OSHA guidelines for the proper use of the tools and accessories needed for this products installation.
- Home Improvement Systems, Inc. and sliding-screen-doors.com shall not be responsible for the improper use of SCREENEZE™ or the cost of injury or damage from the improper use of SCREENEZE™.